


SANITIZER GALLON HOLDER STAND

ASSEMBLY INSTRUCTIONS

PRODUCT OVERVIEW User Guide: 123351

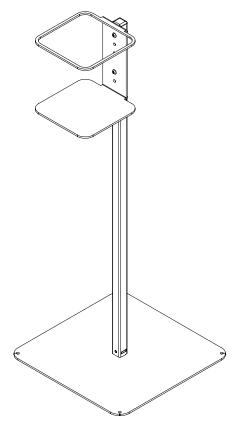

123351 **SANITIZER GALLON HOLDER STAND**

FEATURES

- Powder coated steel
- Fits most gallon sized dispensers
- Also available as a wall mount
- Ships knocked down
- Minimal assembly required


TABLE OF CONTENTS User Guide: 123351

TABLE OF CONTENTS

Parts Diagram	4
Safety Information	5
Assembly Instructions	6-8
Warranty	9

This manual explains how this product is assembled, used, and maintained. All products are subjected to functional and quality tests before leaving our facility.

123351 **PARTS DIAGRAM**

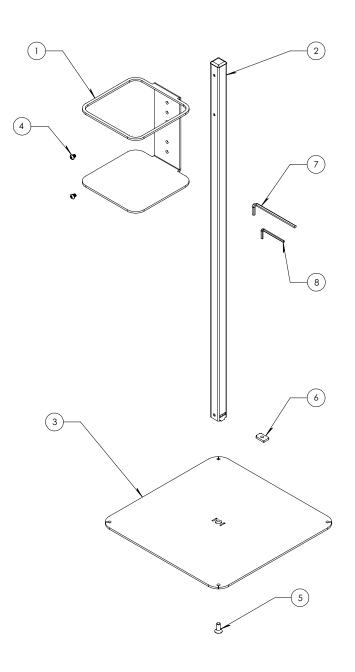

PA	RTS	Qty/Package
1.	Gallon Holder	1
2.	Post	1
3.	Base Plate	1
4.	1/4-20 5/16 in Screw	2
5.	M8x1.25 Flat Head Screv	v 1
6.	Nut Insert	1
7.	5mm L Hex Key	1
8.	5/32 in L Hex Key	1

User Guide: 123351 SAFETY INFORMATION

SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS Save these instructions.

DANGER

To keep this product from tipping, place it on a firm and level surface out of the way of pedestrian traffic.

WARNING: To reduce the risk of death, serious injury, or property damage, read and follow this safety information and the provided instructions when assembling this product. Do not change or replace components and accessories provided by BUILT Systems.

KEEP AWAY FROM CHILDREN

Do not allow children to use this product unattended.

BEFORE USING THIS PRODUCT

Be sure the components are securely fastened with the appropriate screws.

ASSEMBLY INSTRUCTIONS

The assembly of this product to be made in accordance with this manual. Changes to the product or improper use may affect the safety, function, and life of your product.


ASSEMBLY OVERVIEW


- 1. Install nut insert
- 2. Mount base plate
- 3. Attach gallon holder

If you have any difficulty assembling this unit, or need to order replacement parts, please contact our Customer Service department. Use the parts diagram on page 4 as a reference.

ASSEMBLY INSTRUCTIONS User Guide: 123351

INSTALL NUT INSERT Install the nut insert into the post through the larger opening, making sure it sits flush.

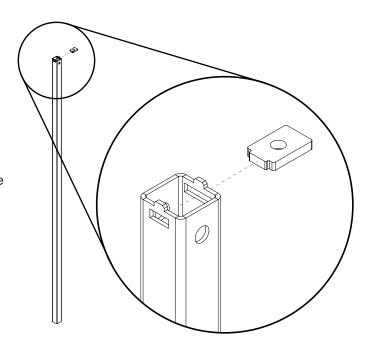


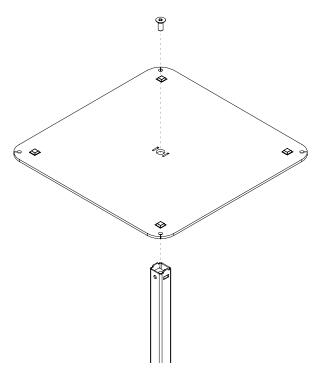

MOUNT BASE PLATE

With the nut insert pushed in, place the base plate on top of the post, lining up with the appropriate guiding slots. Ensure the rubber feet are facing away from the post. Mount the base plate to the post using the provided M8x1.25 flat head screw and 5mm L hex key tool.

ASSEMBLY INSTRUCTIONS User Guide: 123351

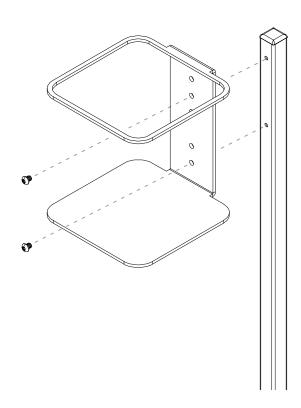

ATTACH THE GALLON HOLDER With the gallon holder holes lined up with the post, fasten the holder to the post using the provided 1/4-20 5/16 in screws and 5/32 in L hex key tool.

CUSTOMER SERVICE User Guide: 123351

CUSTOMER SERVICE

If you have any problems with your product, please contact our service department.

PHONE: 1-616-795-4569 **INFO@BUILTSYSTEMS.NET**

WARRANTY

CONTACT YOUR SALES REPRESENTATIVE FOR WARRANTY INFORMATION

BUILT Systems

11511 James Street Holland, MI 49424 616-795-4569 info@builtsystems.net www.builtsystems.net



BUILT SYSTEMS

Made in Michigan, BUILT products provide manufacturers with essential solutions for the plant floor—products with a combination of attributes and benefits offered nowhere else.

Our manufacturing facility is lean, clean, visual, and streamlined. We design and build highly customized products using advanced machinery and design our own height adjustable products and solutions. Some of our in-house capabilities include:

- Laser Cutting
- Bending
- Welding
- Assembly
- Powder Coating
- Quality Control

To reduce our carbon footprint, eliminate import costs, and support the U.S. economy, we source our materials close to home. BUILT employs American ingenuity to solve problems and create equipment that is better at every level.

THIS PAGE IS INTENTIONALLY LEFT BLANK

BUILT® Systems